

**RM-D1177+ BBK DVD/TV/LCD/LED  
Universal Remote Control  
User Guide**

Turns TV on or off



Turns DVD on or off

Remark:  
Blue print for the DVD function

Insert two "AAA" batteries, press "DVD power" or "TV power", Switch to the corresponding function, test the remote controller can work or not, if can't, please set as follow methods:

**Method 1: Input the Code**

**A, DVD function:** press "DVD power" button and "ENTER" button together, when the indicator lights, according to the dvd remote controller pictures to input the code (such as 001), setting finished, test DVD function.

**B, TV function:** press "TV power" button and "ENTER" button together, when the indicator lights, according to the tv remote controller pictures to input the code (such as 001), setting finished, test tv function.

**To DVD as an example:**



Indicator lights then input the code 001

Press the "DVD power"

**Method 2: Auto search**

**A, DVD function:** press "DVD power", and don't release. After 6 seconds, the remote controller will search automatic, when volume appears on your tv, release button on time, setting finished, test dvd function.

**B, TV function:** press "TV power", and don't release. After 6 seconds, the remote controller will search automatic, when volume appears on your tv, release button on time, setting finished, test tv function.

**To DVD as an example:**



After 6s, the remote will searching, when volume appers, release "power"

Press the "DVD power"

Remark: press "ENTER" and number "0" button, it will restore factory defaults

Установите две батарейки типа AAA, нажмите "DVD Power" или "TV Power". Включите соответствующую функцию и проверьте работает пульт, или нет. Если нет,

то выполните следующие методы настройки:  
Метод 1: Ввод кода

**A, Функция DVD:** нажмите кнопку "DVD Power" и "Enter" вместе, когда загорится индикатор введите соответствующий картинке пульта код (например 001). Настройка завершена, проверьте функции DVD.

**B, Функция TV:** нажмите кнопку "TV Power" и "Enter" вместе, когда загорится индикатор введите соответствующий картинке пульта код (например 010). Настройка завершена, проверьте функции TV.

Пример для DVD:

Нажмите "DVD Power"

Индикатор загорится - вводите код 001

Метод 2: Авто-поиск

**A, DVD функция:** направьте пульт на DVD плеер, нажмите "DVD Power", и не отпускайте.

Через 6 секунд пульт начнёт автопоиск.

Когда на телевизоре появится громкость – отпустите

кнопку. Настройка завершена, проверьте функции DVD.

**B, TV функция:** направьте пульт на TV, нажмите "TV Power",

и не отпускайте. Через 6 секунд пульт начнёт автопоиск.

Когда на телевизоре появится громкость - отпустите

кнопку. Настройка завершена, проверьте функции TV.

Пример для DVD:

Нажмите "DVD Power"


И через 6 секунд начнется автопоиск, когда появится звук, отпустите "power".

Для сброса настроек нажмите "Enter" и "0".


**DVD MODELS**




000 RC026-01R 000 RC026-02R 000 RC026-05R 000 RC026-06R 000 RC026-07R 000 RC026-10R 000 RC026-11R

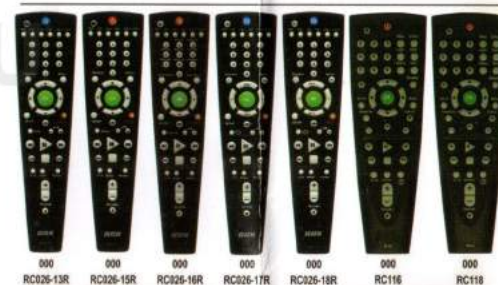


000 RC026-13R 000 RC026-15R 000 RC026-16R 000 RC026-17R 000 RC026-18R 000 RC116 000 RC118

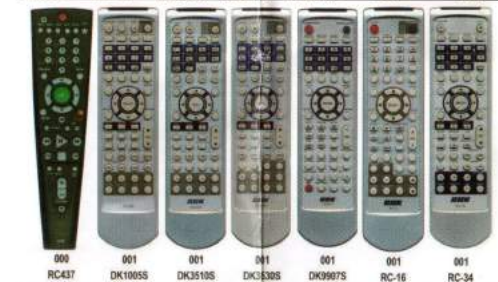

000 RC437 001 DK1005S 001 DK3510S 001 DK3330S 001 DK907S 001 RC-16 001 RC-34

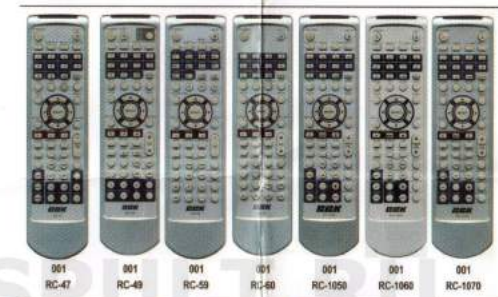

001 RC-47 001 RC-49 001 RC-59 001 RC-60 001 RC-1050 001 RC-1060 001 RC-1070

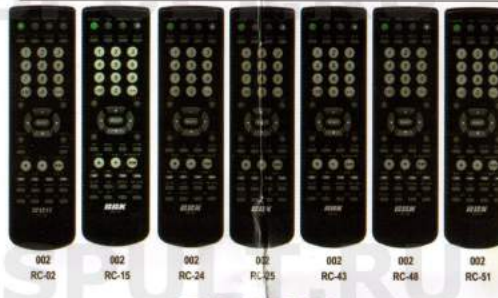


002 RC-02 002 RC-15 002 RC-24 002 RC-25 002 RC-43 002 RC-46 002 RC-51

**DVD MODELS**



002 RC-54 003 ABSS30T 003 ABSS35T 004 AV100 005 AV210T 005 AV215T 006 AV214T




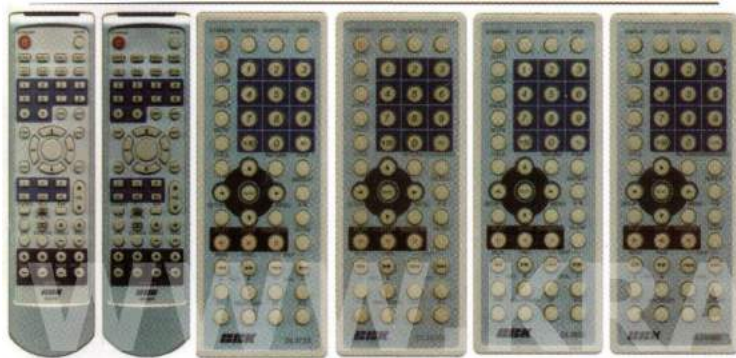

007 AV310T 007 AV320T 008 DL373S 008 DL383DC 008 DL383S 008 DL3103DC



019 RC2252 RC1958 020 RC2715 021 RC3000 022 RC-09 022 RC-21 023 RC-58 024 RC-342 MA-955

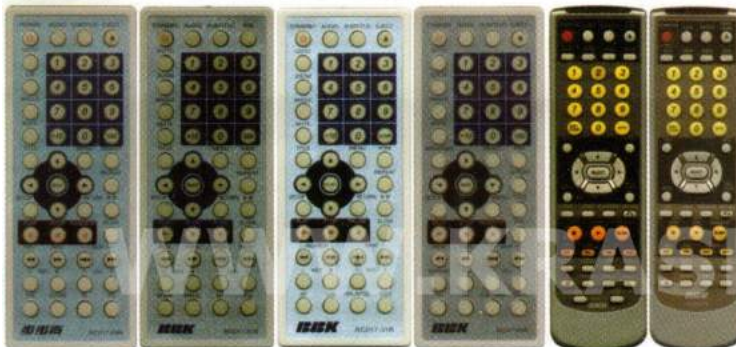

008 RC017-06R 008 RC017-22R 008 RC017-31R 008 RC017-40R 009 DW9916S 009 DW 9915S



025 RC-970 026 RC-MA101 027 RC019-24R 028 FSA-1806




010 DW9953S 011 LT115 011 LT121 011 LT122 011 LT123 012 FSA-6800

WWW.KRASPU.LT.RU TV/LED/LCD-MODELS



000 RC-LED100 000 RC-LEM100 001 HOF98G295GP06 001 HOF98K425GP05 HOF98K425GP08 002 LT118-03 003 LT1507 004 LT1510

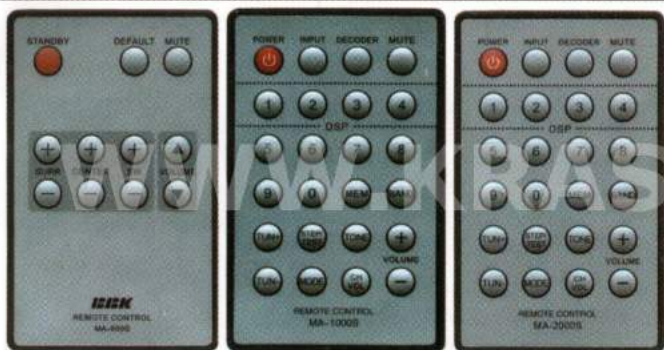

013 MA-800S 014 MA-1000S 014 MA-2000S



005 LT2003S 005 LT117 006 LT4710 007 RC3229 008 CAMERON 008 LT1504 009 RC-1902

WWW.KRASPU.LT.RU DVD MODELS



015 RC019-01R 015 RC019-12R 015 RC019-19R 016 RC026-020R 017 RC073-01R 017 RC073-02R 018 RC1024 018 RC3050



010 RC2465 011 RC-2603 012 EN-31907 012 HVD208 013 HYUNDAI 014 RC-STB100